


SU517



BLACKBODY RADIATION SLIDERULE

manual of instruction and information

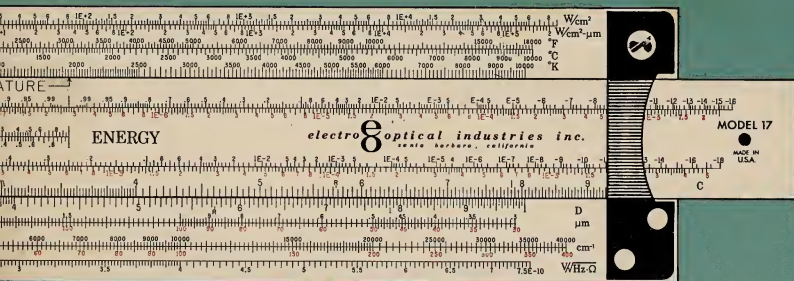



BLACKBODY
RADIATION SLIDERULE



MANUAL OF INSTRUCTION & INFORMATION

First Edition



electro optical industries, inc.

Post Office Box 3770 □ Santa Barbara, California 93105

First Printing

DECEMBER, 1971

LITHOGRAPHED IN THE UNITED STATES OF AMERICA

BY

THE MEAD COMPANY ■ INGLEWOOD, CALIFORNIA 90304

Copyright © 1971 By Electro Optical Industries, Incorporated



BLACKBODY RADIATION SLIDERULE



Explanation of Scales

Planck's expression for spectral radiant flux density into a surrounding hemisphere in the wavelength interval λ to $\lambda + d\lambda$ is

$$H\lambda = \frac{2\pi hc^2}{\lambda^5} \frac{1}{e^{\frac{hc}{\lambda kT}} - 1} \quad [W/cm^2 \cdot \mu m]$$

The corresponding expression for spectral radiant photon density is

$$Q\lambda = \frac{2\pi c}{\lambda^4} \frac{1}{e^{\frac{hc}{\lambda kT}} - 1} \quad [\text{photons/sec-cm}^2 \cdot \mu m]$$

where* $c = 2.997925 \times 10^{10}$ cm/sec
 $h = 6.6256 \times 10^{-34}$ Joule-sec
 $k = 1.38054 \times 10^{-23}$ Joule/deg-K

t_f, t_c, T

The three temperature scales, t_f , t_c , and T give blackbody temperature in degrees Fahrenheit, Centigrade, and Kelvin, respectively.

λ_1, λ_2

The wavelength scales, λ_1 and λ_2 , give wavelength in the intervals

$$\begin{aligned} .3 &\leq \lambda_1 \leq 30 \mu m \\ 30 &\leq \lambda_2 \leq 3000 \mu m \end{aligned}$$

on the ENERGY side of the rule, and

$$\begin{aligned} .35 &\leq \lambda_1 \leq 40 \mu m \\ 40 &\leq \lambda_2 \leq 4000 \mu m \end{aligned}$$

on the PHOTONS side.

*NBS Misc. Publ. 253, Revised May, 1969

$$\nu_1, \nu_2$$

The wavenumber scales give wavenumbers in the intervals

$$320 \leq \nu_1 \leq 40000 \text{ cm}^{-1}$$

$$32 \leq \nu_2 \leq 400 \text{ cm}^{-1}$$

on the ENERGY side, and

$$250 \leq \nu_1 \leq 30000 \text{ cm}^{-1}$$

$$2.5 \leq \nu_2 \leq 300 \text{ cm}^{-1}$$

on the PHOTONS side.

$$H_{0-\infty}, Q_{0-\infty}$$

the $H_{0-\infty}$ scale gives the value of

$$H_{0-\infty} = \int_0^{\infty} H_{\lambda} d\lambda = \frac{2\pi^5 k^4 T^4}{15h^3 c^2} \quad [\text{W/cm}^2]$$

the total power radiated by unit area of a blackbody at temperature T.

The analogous photons scale, $Q_{0-\infty}$, gives

$$Q_{0-\infty} = \int_0^{\infty} Q_{\lambda} d\lambda = \frac{4\pi k^3 (1.202057) T^3}{h^3 c^2} \quad [\text{photons/sec-cm}^2]$$

the total number of photons emitted by unit area of a blackbody at temperature T in one second.

$$H_{\lambda m}, Q_{\lambda m}$$

The $H_{\lambda m}$ scale gives the maximum value of the function H_{λ} at a given value of T,

$$H_{\lambda m} = \frac{2\pi k^5 (21.201436) T^5}{h^4 c^3} \quad [\text{W/cm}^2 \cdot \mu\text{m}]$$

with

$$Q_{\lambda m} = \frac{2\pi k^4 (4.77984) T^4}{h^4 c^3} \quad [\text{photons/sec-cm}^2 \cdot \mu\text{m}]$$

the analogous maximum of the function Q_{λ} .

$$H_{\lambda 1} / H_{\lambda m}, \quad H_{\lambda 2} / H_{\lambda m}, \quad Q_{\lambda 1} / Q_{\lambda m}, \quad Q_{\lambda 2} / Q_{\lambda m}$$

These scales give the value of the indicated ratios for wavelengths read on either the λ_1 or λ_2 scales. They are

$$\frac{H_{\lambda 1}}{H_{\lambda m}} = \frac{\left(\frac{hc}{\lambda_1 kT} \right)^5}{e^{\frac{hc}{\lambda_1 kT}} - 1} \cdot \frac{1}{21.201436}$$

$$\frac{H_{\lambda 2}}{H_{\lambda m}} = \frac{\left(\frac{hc}{\lambda_2 kT} \right)^5}{e^{\frac{hc}{\lambda_2 kT}} - 1} \cdot \frac{1}{21.201436}$$

$$\frac{Q_{\lambda 1}}{Q_{\lambda m}} = \frac{\left(\frac{hc}{\lambda_1 kT} \right)^4}{e^{\frac{hc}{\lambda_1 kT}} - 1} \cdot \frac{1}{4.77984082}$$

$$\frac{Q_{\lambda 2}}{Q_{\lambda m}} = \frac{\left(\frac{hc}{\lambda_2 kT} \right)^4}{e^{\frac{hc}{\lambda_2 kT}} - 1} \cdot \frac{1}{21.201436}$$

(dimensionless)

$$\frac{H_{0-\lambda 1}}{H_{0-\infty}}, \quad \frac{Q_{0-\lambda 1}}{Q_{0-\infty}}, \quad \frac{H_{\lambda 2-\infty}}{H_{0-\infty}}, \quad \frac{Q_{\lambda 2-\infty}}{Q_{0-\infty}}$$

These scales give the fraction of blackbody power (or photon rate) emittance falling in the indicated wavelength interval. For wavelengths read from the λ_1 scale, the ratios are

$$\frac{H_{0-\lambda_1}}{H_{0-\infty}} = \frac{\int_0^{\lambda_1} H_\lambda d\lambda}{\int_0^\infty H_\lambda d\lambda}$$

$$= \frac{15}{\pi^4} \sum_{n=1}^{\infty} \frac{e^{-nu}}{n^4} (n^3 u^3 + 3n^2 u^2 + 6nu + 6)$$

$$\frac{Q_{0-\lambda_1}}{Q_{0-\infty}} = \frac{\int_0^{\lambda_1} Q_\lambda d\lambda}{\int_0^\infty Q_\lambda d\lambda}$$

$$= \frac{1}{2.404117} \sum_{n=1}^{\infty} \frac{e^{-nu}}{n^3} (n^2 u^2 + 2nu + 2)$$

(dimensionless)

where $u = \frac{hc}{\lambda kT}$.

For convenience, the other integrated quantities are taken from λ_2 to ∞ :

$$\frac{H_{\lambda_2-\infty}}{H_{0-\infty}} = \frac{\int_{\lambda_2}^{\infty} H_\lambda d\lambda}{\int_0^{\infty} H_\lambda d\lambda} = 1 - \frac{\int_0^{\lambda_2} H_\lambda d\lambda}{\int_0^{\infty} H_\lambda d\lambda}$$

$$\frac{Q_{\lambda_2-\infty}}{Q_{0-\infty}} = \frac{\int_{\lambda_2}^{\infty} Q_\lambda d\lambda}{\int_0^{\infty} Q_\lambda d\lambda} = 1 - \frac{\int_0^{\lambda_2} Q_\lambda d\lambda}{\int_0^{\infty} Q_\lambda d\lambda}$$

(dimensionless)

$$V_n/\sqrt{R\Delta f}$$

This scale gives RMS Johnson noise potential per root ohm-hertz,

$$\frac{V_n}{\sqrt{R\Delta f}} = \sqrt{4kT} \quad [V/\sqrt{\text{hz}\cdot\Omega}]$$

$$E_{\lambda m}$$

This scale gives the energy of a photon having wavelength λ_m (at the maximum of H_λ) emitted at temperature T.

$$E_{\lambda m} = (4.965114)kT \quad \text{ev}$$

PROBLEM SOLVING WITH THE RADIATION SLIDERULE**

The Stock Scales

Quantities which are functions of T alone, $H_{0-\infty}$, $Q_{0-\infty}$, λ_m , $H_{\lambda m}$, $Q_{\lambda m}$, $V_n/\sqrt{R\Delta f}$, $E_{\lambda m}$, can be read directly from the appropriate stock scales when the hairline is set to the desired temperature.

EXAMPLE: Set the hairline to 1000°K on the T scale. Read directly beneath it

$$H_{0-\infty} = 5.7 \text{ W/cm}^2$$

$$H_{\lambda m} = 1.3 \text{ W/cm}^2 \cdot \mu\text{m}$$

$$V_n/\sqrt{R\Delta f} = 2.34 \times 10^{-10} \text{ V}/\sqrt{\text{hz}\cdot\Omega}$$

$$\lambda_m = 2.9 \mu\text{m} \text{ on the } \lambda_1 \text{ scale}$$

from the ENERGY side of the stock, and the photon quantities

$$Q_{0-\infty} = 1.52 \times 10^{20} \text{ photons/sec}\cdot\text{cm}^2$$

$$Q_{\lambda m} = 2.1 \times 10^{19} \text{ photons/sec}\cdot\text{cm}^2 \cdot \mu\text{m}$$

$$E_{\lambda m} = .427 \text{ ev}$$

$$\lambda_m = 3.67 \mu\text{m} \text{ on the } \lambda_1 \text{ scale}$$

from the PHOTONS side of the stock.

**Powers of ten are denoted in Feynman notation on this rule; e.g., $4E - 8$ is equal to 4×10^{-8} .

The Slide Scales

Quantities which are functions of both wavelength and temperature, $H_{\lambda 1}/H_{\lambda m}$, $H_{\lambda 2}/H_{\lambda m}$, $Q_{\lambda 1}/Q_{\lambda m}$, $Q_{\lambda 2}/Q_{\lambda m}$, $H_{0-\lambda 1}/H_{0-\infty}$, $H_{\lambda 2-\infty}/H_{0-\infty}$, $Q_{0-\lambda 1}/Q_{0-\infty}$, $Q_{\lambda 2-\infty}/Q_{0-\infty}$, can be read from the appropriate slide scale when the central TEMPERATURE arrow on the slide is placed below the desired temperature, and the hairline is placed over the desired wavelength on the λ_1 or λ_2 scale.

EXAMPLE: Move the slide until the TEMPERATURE arrow is directly below 1000°K on the T scale. Set the hairline over $2\mu\text{m}$ on the λ_1 (ENERGY side) scale, and read beneath it

$$H_{\lambda 1}/H_{\lambda m} = .68$$

$$H_{0-\lambda 1}/H_{0-\infty} = 6.7 \times 10^{-2}$$

for a blackbody at the given wavelength and temperature.

Turn the rule over to the PHOTONS side, reset the hairline to $2\mu\text{m}$ on the λ_1 scale, and read beneath it

$$Q_{\lambda 1}/Q_{\lambda m} = .42$$

$$Q_{0-\lambda 1}/Q_{0-\infty} = 2.1 \times 10^{-2}.$$

Computing Absolute Bandpass Quantities

It is possible to compute various absolute quantities for a given wavelength interval by means of the relations

$$H_{\lambda 1} = \left(\frac{H_{\lambda 1}}{H_{\lambda m}} \right) \cdot H_{\lambda m} \qquad H_{\lambda 2} = \left(\frac{H_{\lambda 2}}{H_{\lambda m}} \right) \cdot H_{\lambda m}$$

$$Q_{\lambda 1} = \left(\frac{Q_{\lambda 1}}{Q_{\lambda m}} \right) \cdot Q_{\lambda m} \qquad Q_{\lambda 2} = \left(\frac{Q_{\lambda 2}}{Q_{\lambda m}} \right) \cdot Q_{\lambda m}$$

and

$$\int_{\lambda a}^{\lambda b} H_{\lambda} d\lambda = \left(\frac{H_{0-\lambda b}}{H_{0-\infty}} - \frac{H_{0-\lambda a}}{H_{0-\infty}} \right) \cdot H_{0-\infty}$$

$$\int_{\lambda a}^{\lambda b} Q_{\lambda} d\lambda = \left(\frac{Q_{0-\lambda b}}{Q_{0-\infty}} - \frac{Q_{0-\lambda a}}{Q_{0-\infty}} \right) \cdot Q_{0-\infty}$$

for long wavelength intervals. The differential forms

$$H_{\lambda} \Delta \lambda$$

$$Q_{\lambda} \Delta \lambda$$

may be used for small wavelength intervals. The four multiplier scales, $M(H_{\lambda m})$, $M(H_{0-\infty})$, $M(Q_{\lambda m})$, $M(Q_{0-\infty})$, have been included to expedite the required multiplications.

EXAMPLE: Compute the value of H_{λ} associated with temperature $T = 1500^{\circ}\text{C}$ and wavelength $\lambda = 8.5 \mu\text{m}$.

Move the slide until the TEMPERATURE arrow is directly beneath 1500°C on the t_c scale. Then set the hairline over $8.5 \mu\text{m}$ on the λ_1 scale and read the value of $H_{\lambda}/H_{\lambda m}$, 2.4×10^{-2} , directly beneath it on the $H_{\lambda 1}/H_{\lambda m}$ scale. Transfer this value to the $M(H_{\lambda m})$ multiplier scale by resetting the hairline, and read

$$H_{\lambda} = .54 \text{ W/cm}^2 \cdot \mu\text{m}$$

beneath it on the $H_{\lambda m}$ scale.

EXAMPLE: Compute $H_{0-\lambda}$ for a temperature of 350°F and wavelength of $20 \mu\text{m}$.

First compute the value of

$$\frac{H_{0-\lambda}}{H_{0-\infty}} = .89$$

as before. Transfer this value to the $M(H_{0-\infty})$ scale by resetting the hairline; read beneath it

$$H_{0-\lambda 1} = .21 \text{ W/cm}^2$$

on the $H_{0-\infty}$ scale.

Extending the Range of a Scale

The stock scales may be used with higher or lower values of temperature than those represented on the rule. Simply multiply the desired (absolute) temperature by 10 raised to a convenient power, so that the new temperature appears on the T scale. Solve the problem using this new value of T, then multiply the result by the appropriate factor as listed in Table 1.

Table 1

If T is multiplied by	multiply the value of	by a factor of
10^{-n}	$H_{0-\infty}$	10^{4n}
10^{-n}	$Q_{0-\infty}$	10^{3n}
10^{-n}	$H_{\lambda m}$	10^{5n}
10^{-n}	$Q_{\lambda m}$	10^{4n}
10^{-n}	$V_n/\sqrt{R\Delta f}$	$10^{n/2}$
10^{-n}	$E_{\lambda m}$	10^n

NOTE: Without recourse to Table 1, it is possible to deduce the required factor by inspection of the scale itself. For example, if T is reduced by a factor of ten [in going from 1000°K to 100°K, say] the value of $Q_{0-\infty}$ evidently decreases by a factor of 10^3 [1.52×10^{20} to 1.52×10^{17}]. Thus, an additional ten-fold temperature reduction to 10°K would give $Q_{0-\infty} = 1.52 \times 10^{14}$ photons/sec-cm².

A similar extension procedure can be used with each of the stock scales.

EXAMPLE: Find $Q_{0-\infty}$ for a blackbody at a temperature of $T = 20,000^\circ\text{K}$. Using the $Q_{0-\infty}$ scale, solve the problem for $T = 2,000^\circ\text{K}$ ($20,000^\circ\text{K} \times 10^{-1}$). The result is 1.22×10^{21} photons/sec-cm². Now multiply this number by a factor of $10^{3n} = 10^3$ to give

$$Q_{0-\infty} = 1.22 \times 10^{24} \text{ photons/sec-cm}^2.$$

The slide scales can also be used over an extended range of temperature and wavelength. Select new, convenient values of λ and T such that the product λT is the same as for the original problem. The result obtained in this way will be correct without modification.

EXAMPLE: Find $H_\lambda/H_{\lambda m}$ for $T = 15,000^\circ\text{K}$ and $\lambda = .25 \mu\text{m}$. In this case, the product λT will be unchanged if the problem is solved for $T = 1,500^\circ\text{K}$ and $\lambda = 2.5 \mu\text{m}$. Using the $H_{\lambda 1}/H_{\lambda m}$ and T scales, the result is

$$\frac{H_\lambda}{H_{\lambda m}} = .86$$

for the desired temperature and wavelength.

NOTE: If absolute quantities are subsequently to be derived by means of the slide multiplier scales, it is necessary to modify the results obtained according to Table 1.

Sample Problems
(cf. appendix for more detailed solutions)

1. How much radiant power is emitted by a 1.0 square cm. Piece of firebrick at 1,000°C? The total emissivity of firebrick at this temperature is .75.

Solution:

$$\begin{aligned} P &= \epsilon H_{0-\infty} \\ &= (.75)(15) \text{ W/cm}^2 \\ &= 11 \text{ W/cm}^2 \end{aligned}$$

using the t_c , $H_{0-\infty}$, and $M(H_{0-\infty})$ scales.

2. What is the RMS Johnson noise potential developed across a 10,000 Ω resistor at a temperature of 175°F in a 1-hz bandwidth?

Solution:

$$\begin{aligned} V_n &= \left(\frac{V_n}{\sqrt{R\Delta f}} \right) \cdot \sqrt{R\Delta f} \quad \text{for } 175^\circ\text{F} \\ V_n &= (1.39 \times 10^{-10}) \cdot \frac{V}{\sqrt{\text{hz} \cdot \Omega}} \cdot \sqrt{10,000\Omega \cdot 1 \text{ hz}} \\ &= 1.39 \times 10^{-8} \text{ V} \end{aligned}$$

using the t_f and $V_n/\sqrt{R\Delta f}$ scales.

3. How much radiant power is emitted by 1.0 square centimeter of a tungsten rod at a temperature of 2,800°K in the wavelength interval $.7 \leq \lambda \leq .75 \mu\text{m}$? The emissivity of tungsten in this interval is .42.

Solution:

$$\begin{aligned} \Delta H &= \epsilon \int_{\lambda_a}^{\lambda_b} H_\lambda d\lambda \quad \text{for } T = 2,800^\circ\text{K} \\ &= (.42) \int_{.7 \mu\text{m}}^{.75 \mu\text{m}} H d\lambda \\ &= .42 \left[\int_0^{.7 \mu\text{m}} H_\lambda d\lambda - \int_0^{.75 \mu\text{m}} H_\lambda d\lambda \right] \end{aligned}$$

$$= .42 \left(\frac{H_{0-.75\mu m}}{H_{0-\infty}} - \frac{H_{0-.7\mu m}}{H_{0-\infty}} \right) \cdot H_{0-\infty}$$

$$= .42(.083 - .060) \cdot H_{0-\infty}$$

$$= .42(.023)H_{0-\infty}$$

$$= (.42)8.0\text{-W}$$

$$= 3.4 \text{ W}$$

using the T , λ_1 , $H_{0-\infty}$, $M(H_{0-\infty})$, $H_{0-\infty}$, C , and D scales.

4. What is the photon count from a 1.0 cm^2 blackbody at $3,000^\circ\text{C}$ in the interval $15,000 \leq \nu \leq 25,000 \text{ cm}^{-1}$?

Solution:

$$\Delta Q = \int_{\nu = 15,000}^{\nu = 25,000 \text{ cm}^{-1}} Q_\lambda d\lambda \quad \text{at } 3,000^\circ\text{C}$$

$$= \left(\frac{Q_{0-15000 \text{ cm}^{-1}}}{Q_{0-\infty}} - \frac{Q_{0-25000 \text{ cm}^{-1}}}{Q_{0-\infty}} \right) \cdot Q_{0-\infty}$$

$$= (.033 - .001) \cdot Q_{0-\infty}$$

$$= .032Q_{0-\infty}$$

$$= 1.7 \times 10^{20} \text{ photons/sec}$$

using the t_c , ν_1 , $Q_{0-\lambda_1}$, $M(Q_{0-\infty})$, and $Q_{0-\infty}$ scales.

5. How much total radiant power is emitted by a 1.0 square cm blackbody at temperature $T = 45^\circ\text{K}$?

Solution:

$$H = H_{0-\infty}$$

$$= .23 \times 10^{-4} \text{ W}$$

$$= 2.3 \times 10^{-5} \text{ W}$$

using the T and $H_{0-\infty}$ scales with Table 1.

6. Find the total radiant power emitted by a $6,000^\circ\text{K}$ blackbody in a 100\AA bandwidth around $.35 \mu\text{m}$.

Solution:

$$\Delta H = H_{\lambda} \Delta \lambda$$

$$= \left(\frac{H_{\lambda}}{H_{\lambda m}} \right) \cdot H_{\lambda m} \Delta \lambda$$

$$= .75 H_{\lambda m} \Delta \lambda$$

$$= 7.5 \times 10^3 \text{ W/cm}^2 \cdot \mu\text{m} \times 100 \times 10^{-4} \mu\text{m}$$

$$= 75 \text{ W/cm}^2$$

using the T, λ_1 , $H_{\lambda 1}/H_{\lambda m}$, $M(H_{\lambda m})$ and $H_{\lambda m}$ scales.

7. How much radiant power is received from a 4.0 cm^2 blackbody source at $2,700^\circ\text{K}$ if the blackbody is directly in front of the receiver at a distance of 100 centimeters?

Solution:

$$H = \frac{S_{\beta}}{\pi d^2} \cdot H_{0-\infty}$$

where: d = distance between viewer and source

S_{β} = radiating blackbody area

$$H = \frac{4.0 \text{ cm}^2 \times 3.0 \times 10^2 \text{ W/cm}^2}{3.14 \times (100)^2 \text{ cm}^2}$$

$$H = 3.8 \times 10^{-2} \text{ W/cm}^2 \text{ at the receiver}$$

using the T, $H_{0-\infty}$, C, and D scales.



APPENDIX



Sample Problem 1: Set the hairline to $1,000^\circ\text{C}$ on the t_c scale, and read the value 15 W/cm^2 on the $H_{0-\infty}$ scale. To multiply this number by the emissivity, .75, the $M(H_{0-\infty})$ multiplier scale may be used: move the slide until the TEMPERATURE arrow is on $1,000^\circ\text{C}$. Then set the hairline over .75 on the $M(H_{0-\infty})$ scale, and read the required result, 11 W/cm^2 , on the $H_{0-\infty}$ scale.

Sample Problem 2: Set the hairline to the temperature, 175°F on the t_f scale. Read the value of $V_n/\sqrt{R\Delta f}$, $1.39 \times 10^{-10} \text{ V}/\sqrt{\text{hz}\cdot\Omega}$, and multiply this by the value of $\sqrt{R\Delta f} = \sqrt{10,000\Omega\cdot 1\text{hz}} = 100\sqrt{\text{hz}\cdot\Omega}$. The result is $V_n = 1.39 \times 10^{-8} \text{ V}$. For more difficult numerical values, the square root may be found by using the T and D scales: the D scale will read-out directly the square root of the number under the hairline on the T scale. Multiplication can then be carried out with the C and D scales.

Sample Problem 3: Set the TEMPERATURE arrow to $2,800^{\circ}\text{K}$ on the T scale, and move the hairline to $.75 \mu\text{m}$ on the λ_1 scale. Read the value of $H_{0-\lambda_1}/H_{0-\infty}$, .083. Now, move the hairline to $.7 \mu\text{m}$ and read the value of $H_{0-\lambda_1}/H_{0-\infty}$ for this wavelength .060. The difference of these two values, $.083 - .060 = .023$ must be multiplied by $H_{0-\infty}$; set the hairline over .023 on the $M(H_{0-\infty})$ scale and read the value 8.0 W from the $H_{0-\infty}$ scale. Now use the C and D scales to multiply this number by .42, the emissivity. The result is 3.4 W.

Sample Problem 4: Move the TEMPERATURE arrow to read $3,000^{\circ}\text{C}$ on the t_c scale, and set the hairline over $15,000 \text{ cm}^{-1}$ on the V_1 scale. Read the value of $Q_{0-\lambda_1}/Q_{0-\infty}$, .033. Reset the hairline to $25,000 \text{ cm}^{-1}$ and read the value of $Q_{0-\lambda_1}/Q_{0-\infty}$ for this frequency, .001. Compute the difference of these two values, $.033 - .001 = .032$ and set the hairline to this number on the $M(Q_{0-\infty})$ scale. Read the required result, 1.7×10^{20} photons/sec, from the $Q_{0-\infty}$ scale.

Sample Problem 5: Since the temperature of interest, 45°K , is below the range of the T scale, multiply it by 10 and set the hairline to the new temperature, 450°K , on the T scale. Read the value .23 W on the $H_{0-\infty}$ scale. Since the value of T was multiplied by $10^{-n} = 10$, $n = -1$ here, and the value .23 W must be multiplied by a factor of $10^{4n} = 10^{-4}$ to give the correct result for $T = 45^{\circ}\text{K}$. It is

$$\begin{aligned} H_{0-\infty} &= .23 \times 10^{-4} \text{ W} \\ &= 2.3 \times 10^5 \text{ W} \end{aligned}$$

Sample Problem 6: For this small wavelength interval, the differential form

$$\int_{\lambda_a}^{\lambda_b} H_{\lambda} d\lambda = H_{\lambda}(\lambda_a - \lambda_b) = H_{\lambda} \Delta\lambda$$

is used. Set the TEMPERATURE arrow to $6,000^{\circ}\text{K}$ on the T scale. Set the hairline to $.35 \mu\text{m}$ on the λ_1 scale, and read the value of $H_{\lambda_1}/H_{\lambda_m}$,

.75. Reset the hairline to this number on the $M(H_{\lambda m})$ scale, then read the value of $H_{\lambda} = 7.5 \times 10^3 \text{ W/cm}^2 \cdot \mu$ from the $H_{\lambda m}$ scale. Multiply this number by $\Delta\lambda = 100\text{\AA} = 100 \times 10^{-4} \mu\text{m}$. The result is $\Delta H = 75 \text{ W/cm}^2$.

Sample Problem 7: Set the hairline to $2,700^\circ\text{K}$ on the T scale, and read beneath it the value of $H_{0-\infty}$, $3.0 \times 10^2 \text{ W/cm}^2$. Now use the C and D scales to multiply this number by

$$\frac{S_{\beta}}{\pi d^2} = \frac{4.0 \text{ cm}^2}{3.14 \times (100)^2 \text{ cm}^2}$$

The result is $H = 3.8 \times 10^{-2} \text{ W/cm}^2$ at the receiver.

References:

H. W. Makowski, "A Slide Rule for Radiation Calculations," REVIEW OF SCIENTIFIC INSTRUMENTS, 20, 876, (1949)

M. Pivovonsky and M. R. Nagel, TABLES OF BLACKBODY RADIATION FUNCTIONS, Macmillan Co., N. Y. (1961)

HOW TO ADJUST YOUR SLIDERULE

Each rule is accurately adjusted before it leaves the factory. However, handling during shipment, dropping the rule, or a series of jars may loosen the adjusting screws and throw the scales out of alignment. Follow these simple directions for sliderule adjustment.

ALIGNMENT OF RULE BODY

1. Position your slide rule so that the adjusting screws in the two end-plates are up and away from you.
2. Loosen the two end-plate screws to achieve slight flexibility in the rule.
3. Position the slider (or center part of the rule so that its left index is aligned with the index on the fixed stator (at the bottom of the rule).
4. Keeping the slider aligned, position the movable stator (at the top of the rule) so that its index is aligned with the slider.
5. With the thumb and forefinger, apply slight pressure to the left side of the rule, and tighten the screw. (Leave a small gap between the slider and stators to achieve smooth rule movement: approximately .003".)
6. Apply slight pressure to the right side of the rule and tighten that adjusting screw — again leaving a small gap.

7. Confirm alignment on the reverse side of the rule.

ALIGNMENT OF WINDOW ASSEMBLY

1. Loosen all screws on both sides of the window assembly to make the assembly flexible.
2. Working on one side of the rule, locate the unsprung cursor bar; e.g., the bar that does not have a tension spring. (Cursor bars are the opaque teflon components that ride on the edge of the rule.)
3. Using thumb and forefinger, apply upward pressure to the bottom of the unsprung bar — so that it rests firmly against the rule's edge.
4. Also position the window so that the hairline is perpendicular to the index lines on the left side of the rule. Tighten the screw(s) in the unsprung bar. Leave the other screw(s) loose.
5. Turn the rule over and repeat the preceding steps:
 - a. Apply pressure against the cursor bar which has no spring.
 - b. Make certain the hairline is perpendicular to the left index.
 - c. Tighten the screw(s) in the unsprung bar.
6. Continuing on the same side of the rule, tighten the screw(s) in the cursor bar, which is spring-loaded.
7. Reverse the rule and tighten the remaining screw(s) in the spring-loaded bar.
8. Move the window to the opposite end of the rule to confirm alignment with the righthand index.

HOW TO KEEP YOUR SLIDE RULE IN CONDITION

Operation

Always hold your rule between thumb and forefinger at the ends of the rule. This will insure free, smooth movement of the slider and hinder its free movement.

Cleaning

Wash surface of the rule with a non-abrasive soap and water when cleaning the scales.

Lubrication

The metal edges of your slide rule will require lubrication from time to time. To lubricate, put a little white petroleum jelly (Vaseline) on the edges and move the slider back and forth several times. Wipe off any excess lubricant. Do not use ordinary oil as it may eventually discolor the rule surface.



BLACKBODIES FOR SPACE
miniature size, minimum power



EXTENDED TRUE BLACKBODIES
arrays of intersecting cones



**NEW DIFFERENTIAL
TARGET**



Measure MRT and MTF

**NEW HIGH SPEED
BLACKBODIES**




600°C in 6 seconds

**NEW CRYOGENIC
SERIES BLACKBODY**



20° K to 400° K


3000°C Blackbody

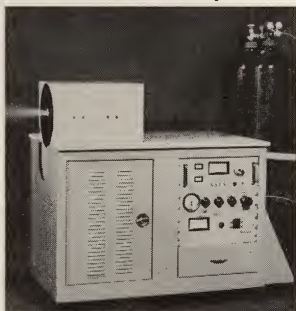

**FOR
TEST
INSTRUMENTATION**

CALL
electro  *optical industries inc.*
(805) 968-2591

**New STATE-OF-THE-ART
DETECTOR TEST SET**

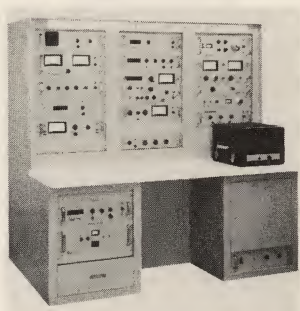

LOW NOISE INSTRUMENTATION

NEW Wave Analyzer



NEW Lock-in Amplifier



NEW Autoranging Amplifier



**Low Noise
Preamps
Current
Mode**



NEW Noise Integrator



NEW Tuned Amplifier



NEW Active Filter




**Voltage
Mode**



electro optical industries, inc. □ p.o. box 3770 □ santa barbara, california 93105 □ (805) 968-2591

e

electro optical industries, inc. • p. o. box 3770 • santa barbara, california 93105

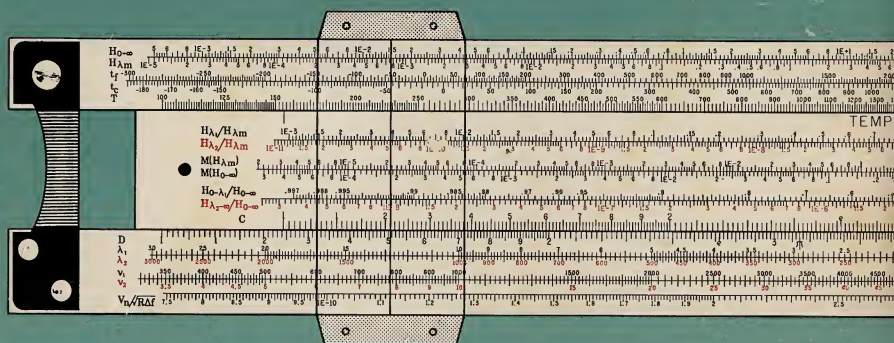

ERRATA

Blackbody Radiation Sliderule Manual

Location of Error	Should Read
Page 3, last equation	$\frac{Q_{\lambda 2}}{Q_{\lambda m}} = \frac{\left(\frac{hc}{\lambda_2 kT}\right)^4}{e^{\frac{hc}{\lambda_2 kT}} - 1} \cdot \frac{1}{4.77984082}$
Page 9, No. 1	The word "Piece" should not be capitalized.
Page 9, last equation	$= .42 \left[\int_0^{.75\mu m} H_{\lambda} d\lambda - \int_0^{.7\mu m} H_{\lambda} d\lambda \right]$
Page 10, No. 4	$\Delta Q = \int_{\nu = 25,000 \text{ cm}^{-1}}^{\nu = 15,000 \text{ cm}^{-1}} Q_{\lambda} d\lambda \quad \text{at } 3,000^{\circ}\text{C}$
Page 12, No. 4 second line	... 15,000 on the ν_1 scale
Page 12, No. 5	$= 2.3 \times 10^{-5} \text{ W}$
Page 12, No. 6	$\int_{\lambda_a}^{\lambda_b} H_{\lambda} d\lambda = H_{\lambda} (\lambda_b - \lambda_a) = H_{\lambda} \Delta\lambda$
Page 14, Operation	... smooth movement of the slider. and hinder its free movement.
Inside rear cover	The correct phone number for Electro Optical Industries, Inc. is (805) 964-6701

